

USB interface options for the HV/W-C (WP) series

Supplementary explanation

For the HV-C/HW-C series:

HVW-02CB (bi-directional, **Type B**)

For the HV-CWP/HW-CWP series:

HVW-02BCWP (bi-directional, **Type mini-B**)

Required item 1

An off-the-shelf USB cable (USB 2.0) is required.

* USB 3.0 cables cannot be used due to the different shape of the connector.

For the HV-C/HW-C series

1) Platform scale



2) USB interface HVW-02CB




3) Off-the-shelf USB cable

Type A to B (USB 2.0)



PC side
Type A

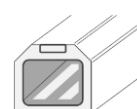

Scale side
Type B

For the HV-CWP/HW-CWP series

1) Platform scale



2) USB interface HVW-02BCWP



Non-waterproof

3) Off-the-shelf USB cable

Type A to mini-B (USB 2.0)



PC side
Type A



Scale side
Type mini B

Required item 2

Download the USB driver from our website and install it on your PC.

Caution

This USB interface is for bi-directional communication with a PC (**not Quick USB**).

- Bi-directional communication => Connection via USB 2.0 (as described above)
- Sending weighing data only => Please use the AD-8527 Quick USB adapter.