

AD-8552E IP

EtherNet /IP Converter

INSTRUCTION MANUAL



A&D Company, Ltd.

This manual and Marks

All safety messages are identified by the following, “WARNING” or “CAUTION”, of ANSI Z535.4 (American National Standard Institute: Product Safety Signs and Labels). The meanings are as follows:

 WARNING	A potentially hazardous situation which, if not avoided, could result in death or serious injury.
 CAUTION	A potentially hazardous situation which, if not avoided, may result in minor or moderate injury.



This is a hazard alert mark.

- This manual is subject to change without notice, at any time, to improve the product.
- The contents of the product specifications and this manual are subject to change without any obligation on the part of the manufacturer.
- Under the copyright laws, the software (program) described in this manual is copyrighted, with all rights reserved.
The software may be installed into one computer and may not be installed into other computers without the prior written consent of A&D Company, Limited. Copying includes translation into another language, reproduction, conversion, photocopy and offer or loan to another person.

© A&D Company, Ltd. 2022 All rights reserved.

No part of this publication may be reproduced, transmitted, transcribed, or translated into any language in any form by any means without the written permission of A&D Company, Limited.

Contents

1. Introduction.....	4
1-1 Features	4
1-2 Cautions	5
2. Composition and Names	6
2-1 AD-8552EIP	6
2-2 Accessories	6
3. Specifications	7
3-1 Dimensions	7
3-2 Applicable models.....	8
4. Power Terminal.....	9
4-1 Power-supply voltage	9
4-2 Connecting example	9
5. EtherNet/IP Interface	10
5-1 EtherNet/IP specifications.....	10
5-2 Connections.....	10
6. RS-232C Interface.....	11
6-1 RS-232C specifications	11
6-2 Connecting cable	11
7. Switch.....	12
7-1 How to operate the switch	12
7-2 Factory setting	12
7-3 EtherNet/IP communication settings	13
7-4 RS-232C function settings	14
7-5 Fixed decimal point function	15
8. LED (status, error display)	16
9. Communication in EtherNet/IP	17
9-1 Preparing for communication	17
9-2 Output data (Instance150)	18
9-3 Input data (Instance100).....	19
9-4 Detailed information of the Input data 1	20
9-5 Detailed information of the Input data2 (Only for AD-4212C / AD-4212D)	21
9-6 Operating example (When connected to the AD-4212C/AD-4212D)	22
10. WEB Interface	25
10-1 Preparing for communication	25
10-2 HOME display.....	25
10-3 Weighing Device Operation Screen.....	26
10-4 Network Setting Screen	27
11. Troubleshooting	28

1.Introduction


Thank you for purchasing the AD-8552EIP EtherNet/IP converter.

Please read this manual completely before using the AD-8552EIP.

1-1 Features

The AD-8552EIP converts the RS-232C communications of the weighing device into EtherNet/IP.

- The measurement value can be reset to zero (re-zero) by operation from the host (PLC or PC).
- When connected to an AD-4212C and AD-4212D, etc., it is possible to change the response speed, perform calibration with an external weight, and supply power from the weighing device.
- The hooks on the back of the AD-8552EIP allow one-touch mounting on a DIN rail.

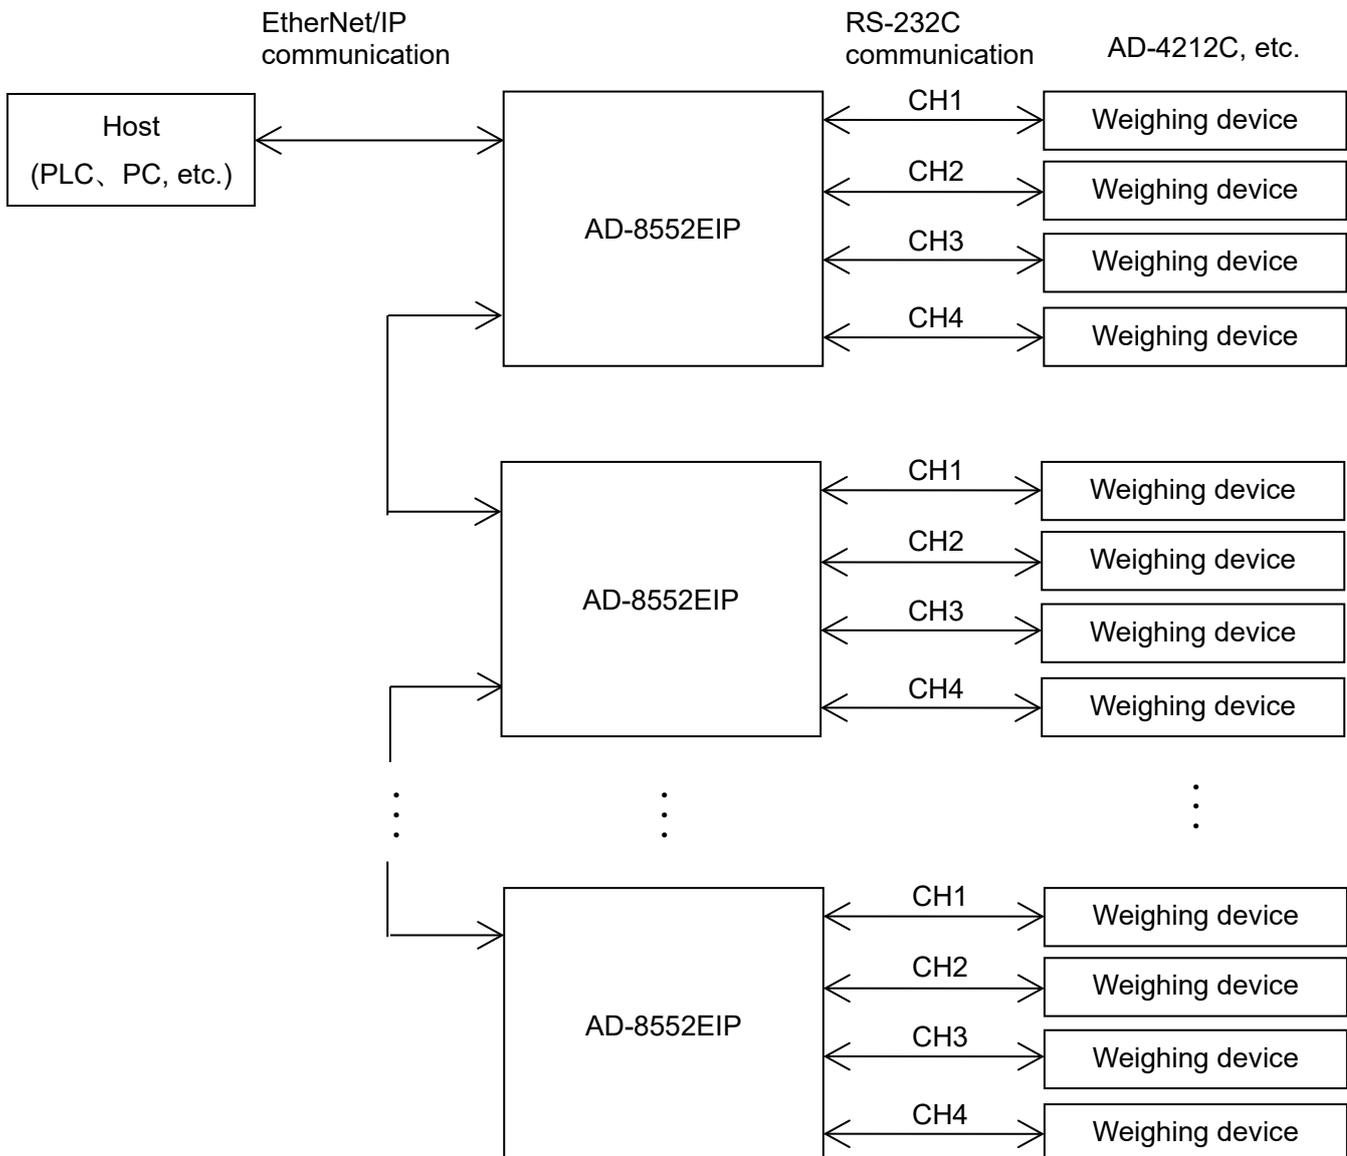

1-2 Cautions

Before use, confirm the following articles for safe operation.

□ Grounding The Converter

Be sure to ground this converter.

Separate this earth ground line from others, like ground line of a motor, inverter or a power source. Unless the converter is grounded, it may result in receiving an electric shock, cause operation error or catch fire.

□ Proper Power Source And Power Cable

Confirm the AC voltage, frequency and power tolerance of the power cable (refer to "4. Power Terminal"). If the voltage range of the cable is lower than the power line voltage, it may cause leakage or catching fire. Use pole compression terminals to connect the power cable to the terminals.

□ Splashing Water

The module is not water-resistant type.

□ Flammable Gas

Do not install the converter where flammable gas is present.

□ Heat Radiation Of The Module

Space out instruments to radiate heat sufficiently.

Do not use in an environment where the ambient temperature exceeds the operating temperature range [0°C to +50°C, 85% RH or less (no condensation)].


This unit is covered with a transparent plastic protective cover at the time of shipment.

After installing and connecting, be sure to remove the protective cover before turning on the power.

If it is used without removing the protective cover, this unit will overheat.

The protective cover is for preventing the entry of wire scraps and the like during installation and connecting.


Do not remove it until installation and connecting are complete.

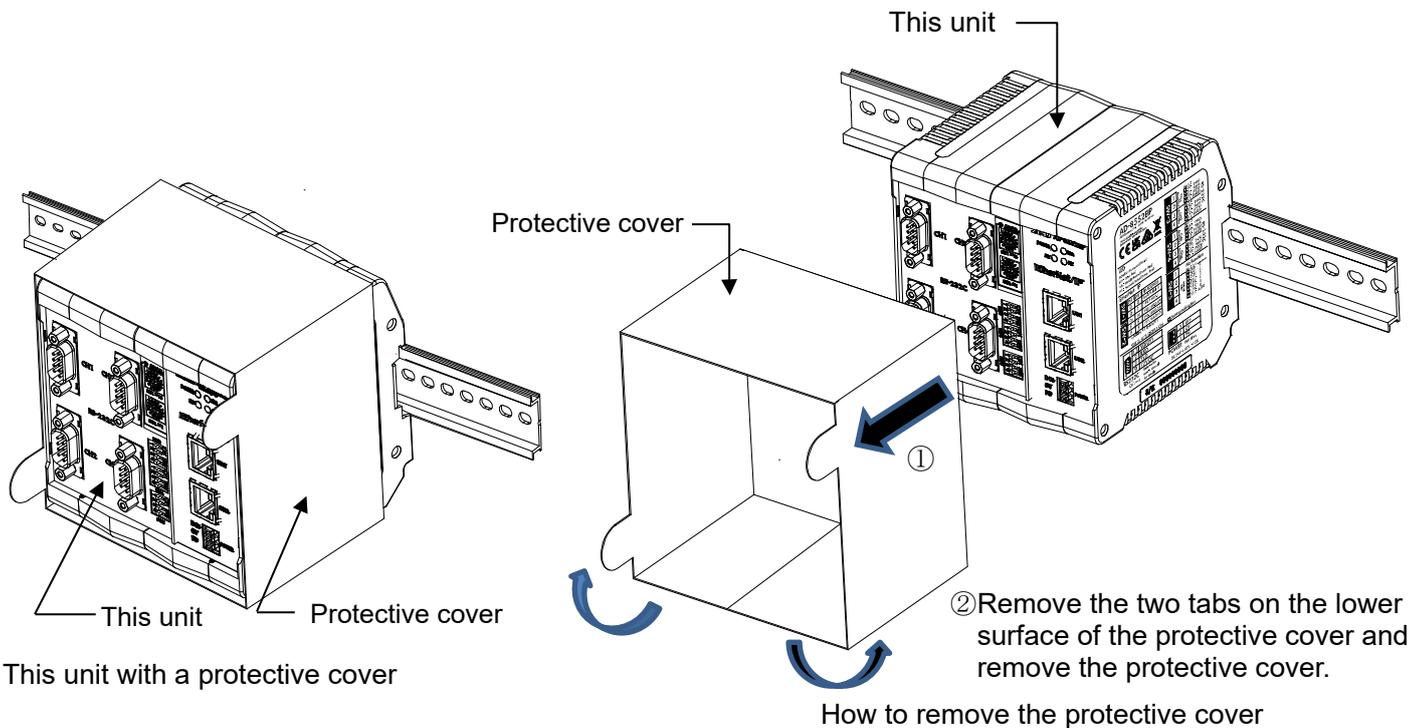

3. Specifications

- Voltage requirement : 24 VDC external power supply [+ 10%, -15%]
- Power requirement : 9W Max (When power is supplied to 4 units such as AD-4212C)
- Communication interface : EtherNet/IP interface CT18 compliant (For connection with external devices)
 - Refer to “5-1. EtherNet/IP specifications”
- : RS-232C interface (For connection to weighing device)
 - Refer to “6-1. RS-232C specifications”
- Communication connector : RJ-45 modular connector (For EtherNet/IP interface)
 - D-Sub 9 pin (male) (For RS-232C interface)
- Operating condition : 0°C to + 50°C, Max 85% RH (no condensation)
- External dimensions : 105 (W) x 112 (H) x 103 (D) mm
- Mass : Approximately 440g

3-1 Dimensions

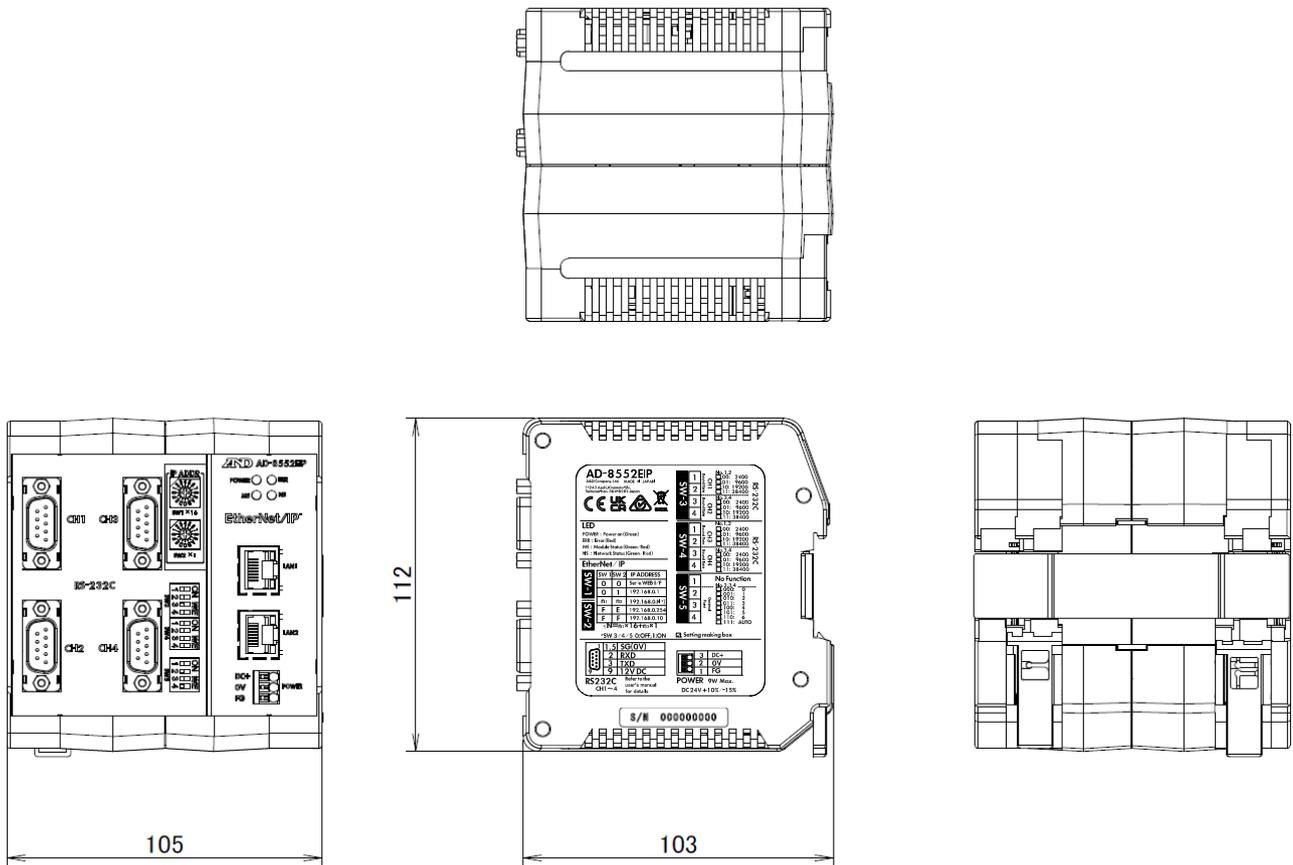

Unit : mm

3-2 Applicable models

■ Functions available for each model, accessories needed for connection to AD-8552EIP.

		Accessories needed to connect the AD8552EIP to a weighing device		EtherNet/IP												Convenient functions	
		Weighing device output options	Cable needed for connection between weighing device and AD8552EIP	Data that can be read from the host (Instance100) T->O					Operations that can be made from the host (Instance150) O->T							Power supply to the weighing device	Auto power on function *1
				Weighing value	Status information	Response speed	Adjustment status	Adjustment weight value	Re-zero	Zero	Taring	Adjustment with internal weight	Adjustment with internal weight	Changing the display digit	Changing the response speed		
AD4212C	Unnecessary	Cable included with the weighing device	○	○	○	○	○	○	×	×	×	○	○	×	○	○	
AD4212D	Connector for A&D's external display *2	Cable included with the weighing device	○	○	○	○	○	○	×	×	○	○	○	×	○	○	
	Connector for the PC/PLC *2	AX-KO4472-1000													×	○	
AD4212A/B	Unnecessary	AX-KO1710-200	○	△*3	×	×	×	○	×	×	×	×	○	×	×	×	
BA-T	Unnecessary	AX-KO2741-180	○	△*3	×	×	×	○	○	○	×	×	×	×	○	○	
BA	Unnecessary	AX-KO2741-180	○	△*3	×	×	×	○	○	○	○	×	○	×	○	○	
GX-A / GX-M	Unnecessary	AX-KO2741-180	○	△*3	×	×	×	○	○	○	○	×	○	×	○	○	
GF-A / GF-M	Unnecessary	AX-KO2741-180	○	△*3	×	×	×	○	○	○	×	×	○	×	○	○	
FZi, HR-AZ	Unnecessary	AX-KO2741-180	○	△*3	×	×	×	○	×	×	○	×	○	×	○	○	
FXi, HR-A	Unnecessary	AX-KO2741-180	○	△*3	×	×	×	○	×	×	×	×	○	×	○	○	
GX, GX-K, GP	Unnecessary	AX-KO1710-200	○	△*3	×	×	×	○	×	×	○	×	○	×	○	○	
GF, GF-K	Unnecessary	AX-KO1710-200	○	△*3	×	×	×	○	×	×	×	×	○	×	○	○	
B M, GH	Unnecessary	AX-KO2741-180	○	△*3	×	×	×	○	×	×	○	×	○	×	○	○	
HR-i	Unnecessary	AX-KO2741-180	○	△*3	×	×	×	○	×	×	×	×	○	×	○	○	
GR	Unnecessary	AX-KO1710-200	○	△*3	×	×	×	○	×	×	○	×	×	×	○	○	
HR	HR-03 (Included with the weighing device)	AX-KO1710-200	○	△*3	×	×	×	○	×	×	×	×	○	×	○	×	
FC-i	Unnecessary	AX-KO2466-200	○	△*4	×	×	×	×	×	×	×	×	×	×	×	×	
HC-i	HC-03i	AX-KO1786-200	○	△*4	×	×	×	×	○	○	×	×	×	×	×	×	
EKi, EWi	Unnecessary	AX-KO2741-180	○	△*3	×	×	×	○	×	×	×	×	×	×	○	×	
EJ, EJ-B	EJ-03	AX-KO2741-180	○	△*3*5	×	×	×	○	×	×	×	×	×	×	○	×	
EK-L	Unnecessary	AX-KO2466-200	○	△*3	×	×	×	○	×	×	×	×	×	×	○	×	
HV-CWP	HVV-03CWP	AX-KO3285-320	○	△*4	×	×	×	×	○	○	×	×	×	×	○	○	
HV-C, HV-CP, HW-C, HW-CP	HVV-03C	AX-KO2741-180	○	△*4	×	×	×	×	○	○	×	×	×	×	○	○	
HV-GV, HW-GV, HV-WP, HW-WP	Unnecessary	AX-KO1786-200	○	△*4	×	×	×	×	○	○	×	×	×	×	○	○*6	
HV-GL/HWGL	Unnecessary	AX-KO1786-200	○	△*4	×	×	×	×	○	○	×	×	×	×	○	×	
FG	FG-23/FG-24	AX-KO1786-200	○	△*4	×	×	×	×	×	×	×	×	×	×	×	×	
FS-i	FS-03i	AX-KO3285-320	○	△*4	×	×	×	×	○	○	×	×	×	×	○	×	
SC/SE	SCE-03	AX-KO3285-320	○	△*4	×	×	×	○	×	○	×	×	×	×	×	×	
SW	SW-03	AX-KO3285-320	○	△*4	×	×	×	×	○	○	×	×	×	×	○	×	
FG-CWP	Unable to connect	Unable to connect	×	×	×	×	×	×	×	×	×	×	×	×	×	○	
GC	Unnecessary	AX-KO2466-200	○	△*4	×	×	×	×	×	×	×	×	×	×	×	○	

* 1 . If the weighing device does not have an auto power-on function 1 . If the weighing device does not have an auto power-on function or auto-start function, it is necessary to turn on the display or each weighing device by key operation after turning on the power.

* 2 . The AD4212D has two types of RS-232C connectors. Connect the display connector and the RS-232C connector of AD-8552EIP. (Do not use the PLC connector.)

* 3 . Some functions (Adjustment error flag) cannot be used.

* 4 . Some functions (during rezero flag, sensitivity adjustment flag) cannot be used.

* 5 . The following models cannot use the during rezero flag. (EJ120B/EJ200B/EJ300B/EJ410B/EJ610B/EJ1500B/EJ2000B/EJ3000B/EJ4100B/EJ6100B)

* 6 . Although the weighing device does not have an auto power-on function or an auto start function, it automatically shifts to the weighing display after the power is turned on, so no key operation is required.

4. Power Terminal

4-1 Power-supply voltage

Connect a constant voltage of external power supply (+ 10% -15%) within the range of 24 VDC to the DC power input terminal of the AD-8552EIP.

⚠ Caution

- Do not use at a voltage exceeding the rated voltage range (24 VDC +10%-15%)
 - Doing so may cause failure or heat generation.
 - This unit may not operate normally.
 - Ground the FG terminal of the switching power supply used for the power supply of this unit.
-
- The power line of this unit should be dedicated for this unit, and be separate from other drive devices.
 - If strong noise is generated from the power line of another device, this unit may be damaged.
 - This unit may not start normally due to the inrush current of other drive devices.
 - Depending on the circuit configuration of this unit, other drive devices may not operate normally.
 - Select a switching power supply capacity of approximately 9W per unit for the dedicated power supply line for this unit.
 - If the power capacity is insufficient, this unit may not operate normally.


■ Connector : DC power input terminal

DC+ 0V FG		Signal name	Description
		DC+	Power supply 24V input
		0V	Power supply 0V input
		FG	Functional Ground

4-2 Connecting example

To insert or remove the wire, press the button part of the connector with a screwdriver or the like.

Modifying the tip of the wire with a bar-type crimp terminal or the like recommended.

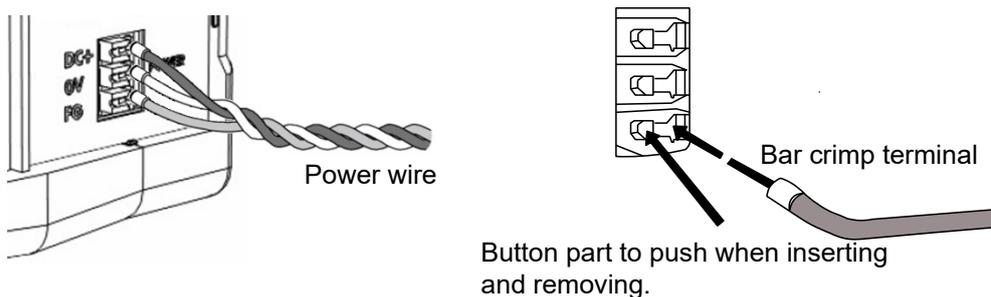


Connection conductor specifications

Clamping range (rating)		0.2 mm ² to 1.5 mm ²
Applicable wire	AWG	AWG24 to AWG16
	Solder plated wire	0.2 mm ² to 1.5mm ²
	Stranded wire	0.2 mm ² to 1.5mm ²
	Bar crimp terminal DIN46228 Part1	0.25 mm ² to 1.5mm ²
	Bar crimp terminal (With color) DIN46228 Part4	0.25 mm ² to 0.75 mm ²
Length		8mm

5. EtherNet/IP Interface

5-1 EtherNet/IP specifications

■ Connector (RJ-45 modular connector)

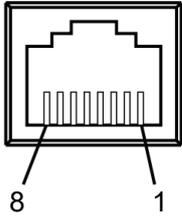

Pin No.	MDI* ¹	MDI-X* ¹
1	TD+	RD+
2	TD-	RD-
3	RD+	TD+
4	-	-
5	-	-
6	RD-	TD-
7	-	-
8	-	-
Housing		


RD : Receive data (Input)
 TD : Send data (Output)

*1. AD-8552EIP is compatible with Auto MDI-X / MDI. The LAN cable can be used either straight or cross.

■ Communication specifications

Communication standard	EtherNet/IP (CT18 compliant)
Vender ID	188 : A&D Company Limited
Device type	43 (0x2B) : Generic Device
Communication function	Cyclic communication (Implicit message) Message communication (Explicit message)
IP address setting method	DIP switch, WEB interface
Transmission speed	10/100Mbps (Autonegotiation)
Communication method	Full duplex / half duplex (Autonegotiation)
Connection form	Star connection, daisy chain connection
Connection cable	Shielded twisted pair cable (STP) Straight / Cross, category 5e and above

5-2 Connections

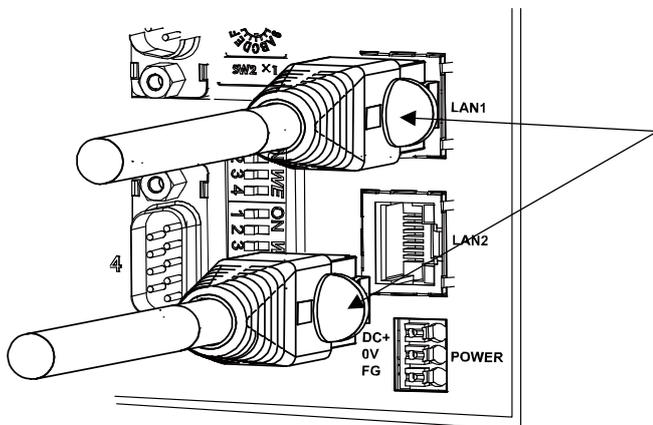

LAN cable
 (Shielded twisted pair cable (STP cable),
 Straight / cross, CAT5e and above)


• Connect to PLC, HUB, PC, etc.

* 1 . LAN cable is not included. Please use a commercially available product.

6. RS-232C Interface

6-1 RS-232C specifications

■ Connector (D-Sub9 pin, male)

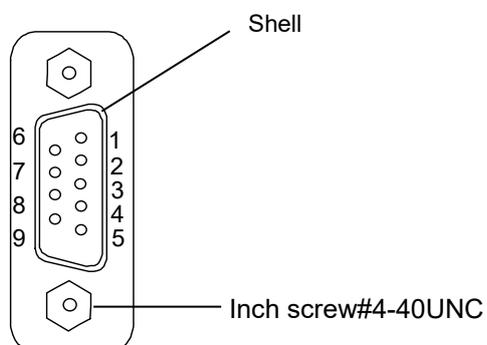

Pin No.	Signal	Direction	Description
1	(Vs)	Output	Output of power supply 0V ^{*1}
2	RXD	Input	Input data
3	TXD	Output	Output data
4	-	-	N.C.
5	SG	-	Signal ground
6	-	-	N.C.
7	-	-	N.C.
8	-	-	N.C.
9	(Va)	Output	Output of power supply 12V ^{*1}
Shell	-	-	Shield

* 1 . When connected to specific weighing device such as AD-4212C / AD-4212D, Weighing device can be operated by supplying power from the AD-8552 EIP.(Refer to “3-2.Applicable models”)

■ Communication specifications


Item	Setting
Baud rate [SW-3, 4 No.1 to 4]	2400*, 9600, 19200, 38400bps
Data bit	7 bit (fixed)
Parity	EVEN (fixed)
Stop bit	1 bit (fixed)
Terminator	<CR><LF> (fixed)
Code	ASCII

*Factory setting

6-2 Connecting cable

Connect with a cable applicable to the individual weighing device. Refer to “3-2.Applicable models”.

■ Connection diagram (When connected to a weighing device.)

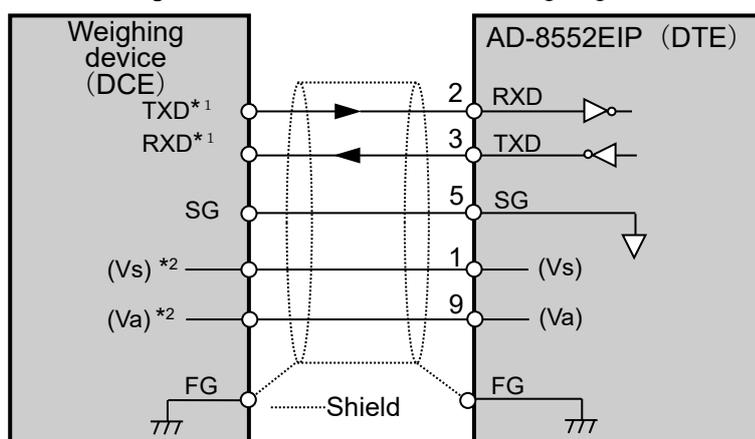

* 1 . Depending on the weighing device, RXD and TXD may be shown on the opposite side (weighing device output: RXD, weighing device input: TXD)

* 2 . May vary depending on the weighing device.

7. Switch


- Set the parameters required for communication using the AD-8552EIP switches (SW-1 to 5).

Caution

- If the setting is changed, be sure to turn on the power off and on again of AD-8552EIP.
When the power is turned on, the switch status is read and applied to operations.


7-1 How to operate the switch

SW-1, 2

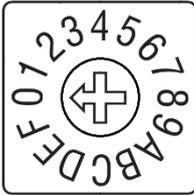


Turn the center arrow to set.
It can be set from 0 to F.

SW-3 to 5

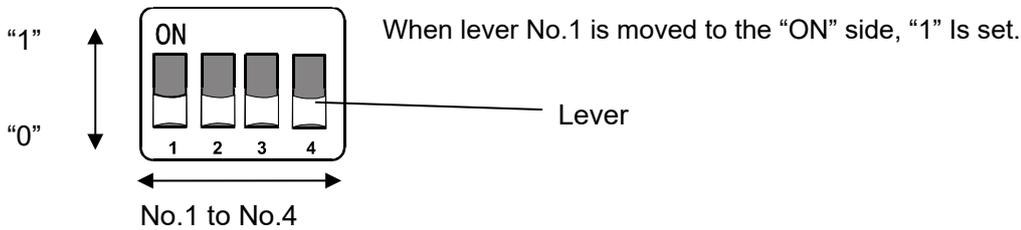

7-2 Factory setting

The switch status and settings at the factory setting are as follows. Refer to “7-3. EtherNet/IP communication settings” “7-4. RS-232C function settings” for the settings that need to be changed.

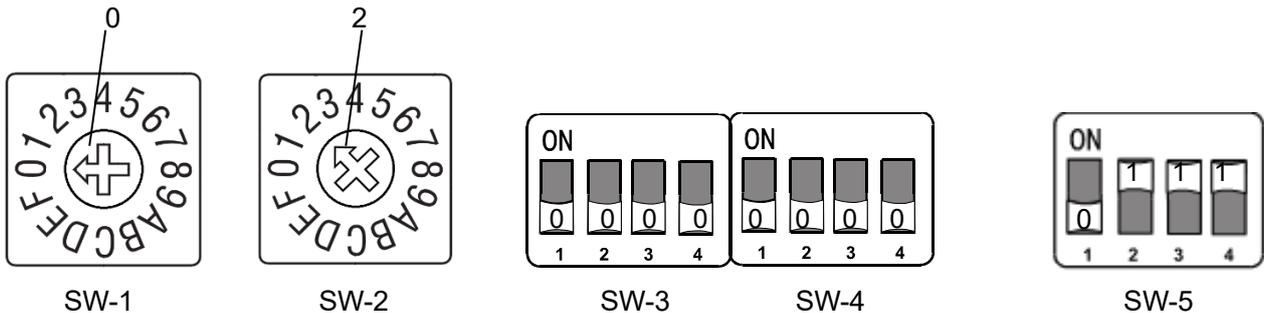

Item	Factory setting value	Switch status at factory setting		
IP address (4th octet)	2	SW-1 : 0	SW-2 : 2	
RS-232C(CH1) baud rate	2400	SW-3 No1 : 0	SW-3 No2 : 0	
RS-232C(CH2) baud rate	2400	SW-3 No3 : 0	SW-3 No4 : 0	
RS-232C(CH3) baud rate	2400	SW-4 No1 : 0	SW-4 No2 : 0	
RS-232C(CH4) baud rate	2400	SW-4 No3 : 0	SW-4 No4 : 0	
No Function		SW-5 No1 : 0		
Fixed decimal point function	AUTO	SW-5 No2 : 1	SW-5 No3 : 1	SW-5 No4 : 1

7-3 EtherNet/IP communication settings

■ IP address setting


The IP address allocation can be set within the following range by using the switch (SW-1, 2).

[192.168.0.1] to [192.168.0.254], [192.168.1.10]


(To set an IP address other than the above, refer to "10-4.Network Setting Screen".)

SW-1	SW-2	IP address
0	0	Becomes the address set on WEB interface, "10-4.Network Setting Screen".
0	1	[192.168.0.1]
0	2	[192.168.0.2]
n1	n2	[192.168.0. (n1×16 + n2×1)]
F	E	[192.168.0.254]
F	F	[192.168.1.10]

<Setting example>

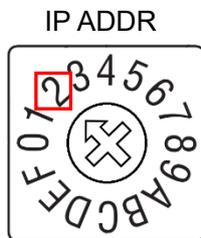

SW1 ×16

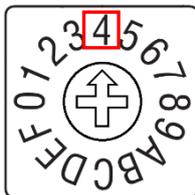

SW2 ×1

When set as shown on the left

SW-1 : 2 → n1 = 2

SW-2 : 4 → n2 = 4

$$4\text{th octet} = n1 \times 16 + n2 \times 1$$

$$= 2 \times 16 + 4 \times 1$$

$$= 32 + 4$$

$$= 36$$

IP address = [192.168.0.36]

Caution


- Please consult with your network administrator before connecting to a network.
- Set the IP address so that it does not overlap with other devices.

7-4 RS-232C function settings

■ Communication setting


SW-3

CH1: RS-232C Baud Rate	Setting state	Setting state	CH2: RS-232C Baud rate
2400 bps			2400 bps
9600 bps			9600 bps
19200 bps			19200 bps
38400 bps			38400 bps

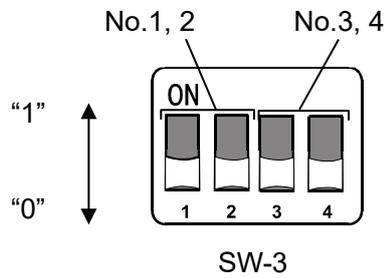

SW-4

CH3: RS-232C Baud Rate	Setting state	Setting state	CH4: RS-232C Baud Rate
2400 bps			2400 bps
9600 bps			9600 bps
19200 bps			19200 bps
38400 bps			38400 bps

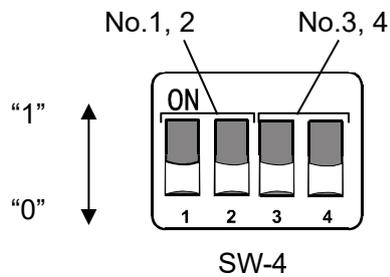

7-5 Fixed decimal point function









- The digits (decimal point position) of the weight value data of EtherNet/IP can be fixed.
- If the connected weighing device has a smart range function, the number of digits after the decimal point is automatically changed.


If you want to fix the number of digits, use the fixed decimal point function.

Example of storage format with fixed decimal point function (Example of CH1)

Weighing device output value (CH1)	Setting of decimal point position	AD-8552EIP internal data	
		Weighing value Instance100 : byte 0 to 3 [CH1 Weighing value]	Decimal point position Instance100 : byte 6 to 7 [CH1 Decimal point position]
123.456g	2	12345	2
	3	123456	3
	AUTO ^{※1}	123456	3
123.45g	2	12345	2
	3	123450	3
	AUTO ^{※1}	12345	2

SW-5 No.2 to No.4

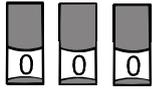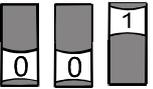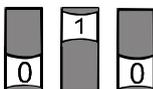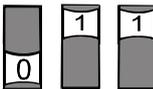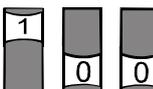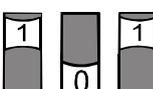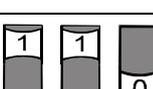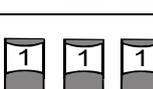Setting of decimal point position : Decimal Point	Setting state
0	
1	
2	
3	
4	
5	
6	
AUTO ^{※1}	

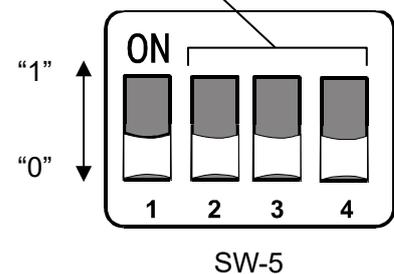

- ★ 1 Depending on the output of the weighing device, the number of digits stored in the weighing value (Instance100 : byte 0 to 3, 18 to 21, 36 to 39, 54 to 57) and the decimal point position (Instance100 : byte 6 to 7, 24 to 25, 42 to 43, 60 to 61) are automatically switched.

8. LED (status, error display)

POWER ○ ○ ERR
MS ○ ○ NS

Display	Function	Color	Status
POWER	Power on	Green lit	The AD-8552EIP is powered on.
ERR	Error	Red lit	There is something wrong with the AD-8552EIP.
MS	Module Status	Off	The AD-8552EIP is not powered on.
		Green lit	It is working normally.
		Green blink	Not initialized.
		Red lit	An unrecoverable failure has occurred.
		Red blink	A recoverable failure has occurred.
NS	Network Status	Off	The AD-8552EIP is not powered on.
		Green lit	The EtherNet/IP connection is established.
		Green blink	The EtherNet/IP connection is not established.
		Red blink	One or more connections have timed out.

9. Communication in EtherNet/IP

- When an EtherNet/IP connection is established between the AD-8552EIP and the PLC, data is periodically communicated by cyclic data. Cyclic data consists of "9-2. Output data" and "9-3. Input data".
- Weighing values can be read and zero reset (rezero) is possible.
- If you are using the following models, you can calibrate (Sensitivity adjustment) via EtherNet/IP.
When calibrating with a weighing device other than the following models, operate with the keys of the weighing device while looking at the display of the measuring instrument.

Applicable model	Sensitivity adjustment method	Outline of procedure
AD-4212C	External weight ^{*1}	While monitoring the balance status with the Input data(Instance100), it is necessary to instruct data acquisition by Output data(Instance150) and to load and unload the weight on the weighing instrument.
AD-4212D	External weight ^{*1}	
	Built-in weight	After instruction by Output data(Instance150), the Input data (Instance100) monitors until calibration is completed.

* 1. When changing the weight value to be used, refer to the instruction manual of the individual weighing device.

9-1 Preparing for communication

1. Set the following setting items so that the RS-232C of the weighing instrument and AD-8552EIP are the same.

Reference: AD-4212C / AD-4212D factory setting

Setting item	Weighing device	AD-8552EIP
Baud rate	2400*, 9600, 19200, 38400 bps	
Data bit	7 bit*	
Parity	EVEN*	
Stop bit	1 bit*	
Terminator	<CR><LF>*	
Data output format	A&D standard format*	—
Data output mode	Settings for continuous output of weighing values. (stream mode*)	—

*AD-8552EIP factory setting (normally, the factory setting of AD-4212C / AD-4212D is the same.)

2. Set the following setting items so that the host (PLC, PC, etc.) and AD-8552EIP are the same.

<Setting example>

Setting item	Host (PLC, PC, etc.)	AD-8552EIP
IP address*	[192.168.0.1]	[192.168.0.2]

* Make sure that IP addresses do not overlap in the connected network.

3. Refer to "4-2. Connecting example", "5-2. Connections", "6-2. Connecting cable" for connecting.
 - Normally, when using the AD-4212C/AD-4212D, power can be supplied from the RS-232C terminal, so connecting to the power terminal of the AD-4212C/AD-4212D is not required.
 - When connecting to the AD-4212D, connect to the AD-8552EIP using the AD-4212D display connector.
4. Turn on the device power.

9-2 Output data (Instance150)

The data transferred from PLC etc. to the AD-8552EIP is called Output data.

Output data is used when outputting a command to the measuring instrument.

■ Output data layout (O->T) [PLC etc. -> AD8552EIP -> Weighing device(CH1 to 4)]

Assembly Instance	Attribute	Byte	Name	Data type	Contents
150	3	0,1	CH1 Command	UInt16	Command output (Weighing device CH1)
		2,3	CH2 Command	UInt16	Command output (Weighing device CH2)
		4,5	CH3 Command	UInt16	Command output (Weighing device CH3)
		6,7	CH4 Command	UInt16	Command output (Weighing device CH4)

■ Details of the Output data

- Command output [CH1~4 Command] (CH1:byte 0,1、 CH2:byte 2,3、 CH3: byte 4,5、 CH4: byte 6,7)

The following command is output to the weighing device connected to CH1-4.

Bit	Contents※ ¹	Remarks
0	"EXC" command output	Used for calibration (sensitivity adjustment)
1	"CAL" command output	
2	"PRT" command output	
3	"R" command output	Performing zero reset (rezero) of the weighing device
4	"SMP" command output	Change the readability of the weighing device
5	"U" command output ※ ²	Change response characteristics or switch units
6	"RZ" command output	Performing zero reset (rezero) of the weighing device
7	"Z" command output	
8	"T" command output	Performing tare
9-15		No function

※1. The AD-8552EIP outputs each command to the connected instrument when a "1" is written.

※2. The operation differs depending on the weighing device. For individual operation commands, refer to "3-2. [Applicable model](#)" or the instruction manual of the relevant weighing device.

9-3 Input data (Instance100)

The data transferred from AD-8552EIP to PLC, etc. is called Input data.

Input data is used when acquiring data from the weighing device.

■ Input data layout (T->O) [Weighing device (CH1 to 4) -> AD8552EIP -> PLC, etc.]

Assembly Instance	Attribute	Byte	Name	Data type	Contents	
100	3	0~3	CH1 Weighing value	Int32	Weighing value	Weighing device CH1
		4,5	CH1 Status information	UInt16	Status information ^{※1}	
		6,7	CH1 Decimal point position	UInt16	Decimal point position	
		8,9	CH1 Weighing unit	UInt16	Weighing unit	
		10,11	CH1 Response characteristics	UInt16	Response characteristics	
		12,13	CH1 Adjustment status	UInt16	Adjustment status	
		14~17	CH1 Adjustment weight value	Int32	Adjustment weight value ^{※2}	
		18~21	CH2 Weighing value	Int32	Weighing value	Weighing device CH2
		22,23	CH2 Status information	UInt16	Status information ^{※1}	
		24,25	CH2 Decimal point position	UInt16	Decimal point position	
		26,27	CH2 Weighing unit	UInt16	Weighing unit	
		28,29	CH2 Response characteristics	UInt16	Response characteristics	
		30,31	CH2 Adjustment status	UInt16	Adjustment status	
		32~35	CH2 Adjustment weight value	Int32	Adjustment weight value ^{※2}	
		36~39	CH3 Weighing value	Int32	Weighing value	Weighing device CH3
		40,41	CH3 Status information	UInt16	Status information ^{※1}	
		42,43	CH3 Decimal point position	UInt16	Decimal point position	
		44,45	CH3 Weighing unit	UInt16	weighing unit	
		46,47	CH3 Response characteristics	UInt16	Response characteristics	
		48,49	CH3 Adjustment status	UInt16	Adjustment status	
		50~53	CH3 Adjustment weight value	Int32	Adjustment weight value ^{※2}	
		54~57	CH4 Weighing value	Int32	Weighing value	Weighing device CH4
		58,59	CH4 Status information	UInt16	Status information ^{※1}	
		60,61	CH4 Decimal point position	UInt16	Decimal point position	
62,63	CH4 Weighing unit	UInt16	Weighing unit			
64,65	CH4 Response characteristics	UInt16	Response characteristics			
66,67	CH4 Adjustment status	UInt16	Adjustment status			
68~71	CH4 Adjustment weight value	Int32	Adjustment weight value ^{※2}			

※1. If you connect to anything other than the AD-4212C / D, the functions will be limited.

※2. This function can be used only when connected to the AD-4212C / D.

9-4 Detailed information of the Input data 1

- Weighing value [CH1 to 4 Weighing value] (CH1:byte 0 to 3, CH2:byte 18 to 21, CH3:byte 36 to 39, CH4:byte 54 to 57),
Decimal point position [CH1 to 4 Decimal point position] (CH1: byte 6,7 CH2: byte 24,25, CH3: byte 42,43, CH4: byte 60,61)

Example of weighing value and decimal point value by output of Weighing device (CH1) (When the decimal point position setting by SW-5 is AUTO)

Weighing value of the weighing device (CH1)	Byte	Name	Contents	Data	Remarks
123.456g	0 to 3	CH1 Weighing value	Weighing value	0x0001E240	⇒ 123456
	6,7	CH1 Decimal point position	Decimal point position	0x0003	⇒ 3
123.456g	0 to 3	CH1 Weighing value	Weighing value	0x00003039	⇒ 12345
	6,7	CH1 Decimal point position	Decimal point position	0x0002	⇒ 2

- Status information of the weighing device [CH1 to 4 Status information] (CH1:byte 4,5, CH2:byte 22,23, CH3:byte 40,41, CH4:byte 58,59)

Byte	Status	Remarks
0	Stable / unstable status of weighing value	0 : Unstable 1 : Stable
1	Weighing range over flag	1 : When the weighing value exceeds the maximum display
2	Non-weighing status flag	0 : When receiving the current weighing value from the weighing device 1 : When weighing value is interrupted for 2 seconds or more, and rezero or calibration is in progress.
3	Rezeroing flag	1 : Rezero processing in progress ^{※1}
4		No function
5	Adjustment in progress flag	1 : Adjustment in progress ^{※1}
6	Adjustment error flag ^{※2}	1 : When calibrating If the value of the weighing calibration weight is not appropriate. (This flag returns to 0 when shifting to the weighing mode.)
7		No function
8 to 15		No function

※1. The flag does not change when operated with the keys of the weighing device.

※2. This flag can be used only when connected to the AD-4212C / D.

Caution: Be sure to read "Weighing value" and "Weighing value status information" at the same time. If they are read separately, the correspondence between the "weighing value" and the "weighing value status information" may differ depending on the update timing, so the weighing value status cannot be determined accurately.

- Weighing unit [CH1~4 Weighing unit] (CH1:byte 8,9, CH2:byte 26,27, CH3:byte 44,45, CH4:byte 62,63)

Relationship between value and unit

Value	Unit (mode)	Value	Unit (mode)	Value	Unit (mode)
0x0000	g (gram)	0x0006	Mom (Momme)	0x000C	TL (Tael)
0x0001	mg (milligram)	0x0007	OZ (Ounce)	0x000D	Tol (Tola)
0x0002	kg (kilogram)	0x0008	Lb (Pound)	0x000E	MES (Messghal)
0x0003	PCS (pieces)	0x0009	OZt (Troy Ounce)	0x000F	N (Newton)
0x0004	% (percent)	0x000A	dwt (pennyweight)	0x0010	MLT (Programmable unit)
0x0005	ct (carat)	0x000B	GN (Grain)	0xFFFF	Indistinguishable

9-5 Detailed information of the Input data2 (Only for AD-4212C/AD-4212D)

The following items change only when connected to the AD-4212C / AD-4212D.

When connected to other weighing devices, it will be the initial value.

- Response characteristics [CH1 ~ 4 Response characteristics] (CH1:byte 10,11, CH2:byte 28,29, CH3:46,47, CH4:byte 64,65)

Value	Status of the response characteristics ^{※1}
0x0000	Initial value
0x0001	FAST
0x0002	MID
0x0003	SLOW
0x0004	User setting ^{※2}

※1. You can switch between FAST / MID / SLOW with the "U" command. (Refer to "9-2. Output data")

※2. With AD-4212C, the response characteristics are set in detail.

(Refer to the WinCT-AD4212C additional instruction manual for the setting method)

- Adjustment status [CH1 to 4 Adjustment status] (CH1:byte 12,13, CH2:byte 30,31, CH3:byte 48,49, CH4:byte 66,67)

Value	Status
0x0000	Initial value
0x0001	Waiting for zero point weighing
0x0002	Weighing the zero point
0x0003	Waiting for adjustment weight to be weighed
0x0004	Weighing adjustment weight
0x0005	Sensitivity adjustment completed
0x0006	Sensitivity adjustment error

- Adjustment weight value [CH1 to 4 Adjustment weight value]

(CH1:byte 14 to 17, CH2:byte 32 to 35, CH3:byte 50 to 53, CH4:byte 68 to 71)

You can check the value of the calibration weight to be used when performing calibration (sensitivity adjustment) with your own weight.

- The unit is grams and the decimal point is a value without a decimal point.
- The value of the calibration weight to be used is used only when "Waiting for calibration weight to be weighed". The initial value is "0xFFFFFFFF". When you return to the weighing mode, it will return to the initial value.

Example of Adjustment weighing value for weighing device (CH1)

Weight value	Byte	Name	Contents	Data	Remarks
100g	14 to 17	CH1 Adjustment weight value	Adjustment weight value	0x00000064	⇒ 100

9-6 Operating example (When connected to the AD-4212C/AD-4212D)

This is the procedure for performing basic operations on the weighing device via EtherNet/IP communication.

(Describes the case where a weighing device is connected to CH1. When using CH2, 3, 4, make the data layout correspond to the relevant CH (channel).)

■ How to read the weighing value (Weighing device CH1)

Steps	Items	Contents	Input data layout (Instance150, Attribute3)		Output data layout (Instance100, Attribute3)	Status confirmation contents
			AD-4212C	AD-4212D		
1	Confirmation of decimal point position	Refer to the corresponding data layout.			Byte 6,7 [CH1 Decimal point position]	Confirm the decimal point position eg) 0x0003 → Decimal point 3 digits
2	Confirmation of weighing unit	Refer to the corresponding data layout.			Byte 8,9 [CH1 Weighing unit]	Confirm the corresponding unit of weighing value eg) 0x0000 → Unit : g
3	Confirmation of weighing value※1	Refer to the corresponding data layout.			Byte 0-3 [CH1 Weighing value] Byte 4,5 [CH1 Status information]	Confirm the weighing value eg) 0x00BC614E → 12345678 Confirm the status information eg) 0x0000 → Stable weighing value
4	Determines the measured value by steps 1 to 3					eg) 12345.678 g (stable)
5	Repeat steps 3 to 4.※2					

※ 1. Be sure to read "Weighing value" and "Weighing value status information" at the same time. If they are read separately, the correspondence between the "weighing value" and the "weighing value status information" may differ depending on the update timing, so the weighing value status cannot be determined accurately.

※ 2. If you change the decimal point position or unit, or if you want to use the smart range function, perform steps 1 and 2 as necessary.

■ Execution example of rezero (zero reset) (Weighing device CH1)

Steps	Items	Contents	Input data layout (Instance150, Attribute3)		Output data layout (Instance100, Attribute3)	Status confirmation contents
			AD-4212C	AD-4212D		
1	Instructs to start rezero	Sets "1" to the corresponding data layout			Byte 0,1 [CH1 Command] Bit 3 ("R" command)	
2	Confirms to start of rezero	Refer to the corresponding data layout.			Byte 4,5 [CH1 Status information] bit3	Waits until bit3 changes from 0 to 1※3
3	Confirms during rezero	Refer to the corresponding data layout.			Byte 4,5 [CH1 Status information] bit3	Waits until bit3 changes from 1 to 0
4	Confirms the completion of rezero	Refer to the corresponding data layout.			Byte 0 to 3 [CH1 Weighing value]	Confirms to become 0x00000000※4
5	Command clear	Sets "0" to the corresponding data layout			Byte 0,1 [CH1 Command] Bit 3 ("R" command)	

※ 3. Normally, changes immediately after setting "1" to the corresponding data layout in the previous step.

When the weighing value is stable, rezeroing is completed instantly and bit3 returns to "0", so the "1" state may not be read depending on the reading timing.

※ 4. If weighing value is unstable, re-zero cannot be executed. Be sure to confirm completion of re-zero by confirming that the weighing value is "0x00000000".

■ Example of calibration (sensitivity adjustment) with external weight (Possible only with AD-4212C / AD-4212D)

Steps	Items	Contents	Input data layout (Instance150 ,Attribute3)		Output data layout (Instance100 ,Attribute3)	Status confirmation contents
			AD-4212C	AD-4212D		
1	Instructs to start the sensitivity adjustment mode	Sets "1" to the corresponding data layout	Byte 0,1 [CH1 Command] bit 1 "CAL" bit 0 "EXC"			
2	Confirms the sensitivity adjustment mode	Refer to the corresponding data layout.			Byte12,13 [CH1 Adjustment status]	Wait until 0x0001 ^{※1}
3	Instructs to start weighing at zero point	Sets "1" to the corresponding data layout	Byte 0,1 [CH1 Command] bit 2 "PRT"			
4	Confirms to start weighing at zero point	Refer to the corresponding data layout.			Byte12,13 [CH1 Adjustment status]	Wait until 0x0002 ^{※1}
5	Confirms during weighing at the zero point	Refer to the corresponding data layout.			Byte12,13 [CH1 Adjustment status]	Wait until 0x0003 ^{※2}
6	Command clear	Sets "0" to the corresponding data forma	Byte0,1 [CH1 Command] bit 2 "PRT"			
7	Confirms the value of the sensitivity weight to be used ^{※4}	Refer to the corresponding data layout.			Byte14-17 [CH1 Adjustment weight value]	Weight value to use (eg) 0x000000C8 ⇒200g
8	Places the weight					
9	Instructs to start weighing the weight	Sets "1" to the corresponding data layout	Byte0,1 [CH1 Command] bit 2 「PRT」			
10	Confirms to start weighing weight	Refer to the corresponding data layout.			Byte12,13 [CH1 Adjustment status]	Wait until 0x0004 ^{※1}
11	Confirms during weighing weight	Refer to the corresponding data layout.			Byte12,13 [CH1 Adjustment status]	Wait until 0x0005 ^{※2 ※3}
12	Replaces the weight					
13	Confirms the transition to the weighing state	Refer to the corresponding data layout.			Byte 0-3 [CH1 Weighing value]	Wait until 0x00000000
14	Command clear	Sets "0" to the corresponding data layout	0,1 [CH1 Command] bit 2 "PRT" bit 1 "CAL" bit 0 "EXC"			

※1. Normally, it changes immediately after setting "1" to the bit of the previous step.

※2. If the weighing device is unstable, the sensitivity adjustment will not be executed and the weighing state will automatically shift to the weighing state (0x00000000).

※3. If the value of the weighed sensitivity adjustment weight is not appropriate, a sensitivity adjustment error (0x0006) will occur. After that, it automatically shifts to the weighing state (0x00000000).

※4. If you want to change the value of the sensitivity adjustment weight to be used, please check the instruction manual of the relevant weighing device.

■ Calibration (sensitivity adjustment) execution example using the built-in weight (Only with the AD-4212D)

Steps	Items	Contents	Input data layout (Instance150 ,Attribute3)		Output data layout (Instance100 ,Attribute3)	Status confirmation contents
			AD-4212D			
1	Calibration (sensitivity adjustment) execution example using the built-in weight	Sets "1" to the corresponding data layout	Byte0,1 [CH1 Command] bit 1 "CAL"			
2	Confirms to start the sensitivity adjustment	Refer to the corresponding data layout.			Byte 4,5 [CH1 Status information]	Wait until bit 5 becomes 1 ^{※1}
3	Confirms the completion	Refer to the corresponding data layout.			Byte 4,5 [CH1 Status information] Byte 12,13 [CH1 Adjustment status]	Wait until bit 5 becomes 0 ^{※1} Confirms becomes 0x0005 ^{※5}
4	Command clear	Sets "0" to the corresponding data layout	Byte0,1 [CH1 Command] bit 1 "CAL"			

- ※5. Normally, changes immediately after setting “1” to bit in the previous step.
- ※6. If the weighing value is unstable, Sensitivity adjustment completed (0x0005) is not entered, and it switches automatically to weighing mode. Also, if the weighing value is not appropriate, Sensitivity adjustment error (0x0006) will occur. After that, it automatically shifts to weighing status (0x0000).

10. WEB Interface

- The WEB interface is a function that allows to confirm the operation of the weighing device from a PC browser. The WEB interface can be used to check the operation when starting up the production line or when troubleshooting.

Caution

- Establishing communication between the WEB interface and EtherNet/IP at the same time is not recommended. (It may conflict with EtherNet/IP communication.)
- Communication may become unstable depending on the environment, so using for continuous connection and monitoring are recommended.
- The browsers that have been confirmed to work are Microsoft Edge, Google Chrome, Mozilla Firefox, and Safari.

10-1 Preparing for communication

1. Prepare in the same way as "9-1. Preparation for communication" (9. Communication in EtherNet/IP).
2. Enter the IP address of the AD-8552EIP in the address bar of your browser.
3. Press "Connect".
4. Enter "and" in the "Password" field and press "send Password".

10-2 HOME display

The screenshot shows the AD-8552EIP WEB interface. At the top, it displays 'AD-8552EIP [EtherNet/IP Convertor]' and 'CH.' followed by buttons for channels 1, 2, 3, 4, and ALL. Below this, there are four weighing displays (CH.1 to CH.4) showing values like '200.000 g'. A large table displays 'Instance 100 InputData(T->O)' with columns for 'byte' and 'Value(Hex)' for various parameters like 'Weighing value', 'Status information', etc. To the right, a 'Network Properties' section shows IP address, Subnet mask, Default gateway, and MAC address. A blue circular button with a wrench icon is located at the bottom right. Five numbered callouts point to specific features: 1 (Weighing display), 2 (Data layout), 3 (Weighing device display switching button), 4 (Property), and 5 (Network setting button).


	Name	Description
①	Weighing display	Displays the "weighing value" of the weighing device connected to CH.1 to 4.
②	Data layout	Displays the data layout of EtherNet/IP communication
③	Weighing device display switching button	The "10-3.Weighing device operation screen" connected to each channel is displayed.
④	Property	Displays the "Network Settings" and "MAC Address" of the AD-8552EIP.
⑤	Network setting button	The AD-8552EIP "10-4. Network Setting Screen" is displayed.

10-3 Weighing Device Operation Screen

- The weighing device operation screen has a mode (CH1 to 4) that displays one channel on one screen and a mode (ALL) that displays four channels.

■ 1 channel display (CH1 to 4)

① Weighing display

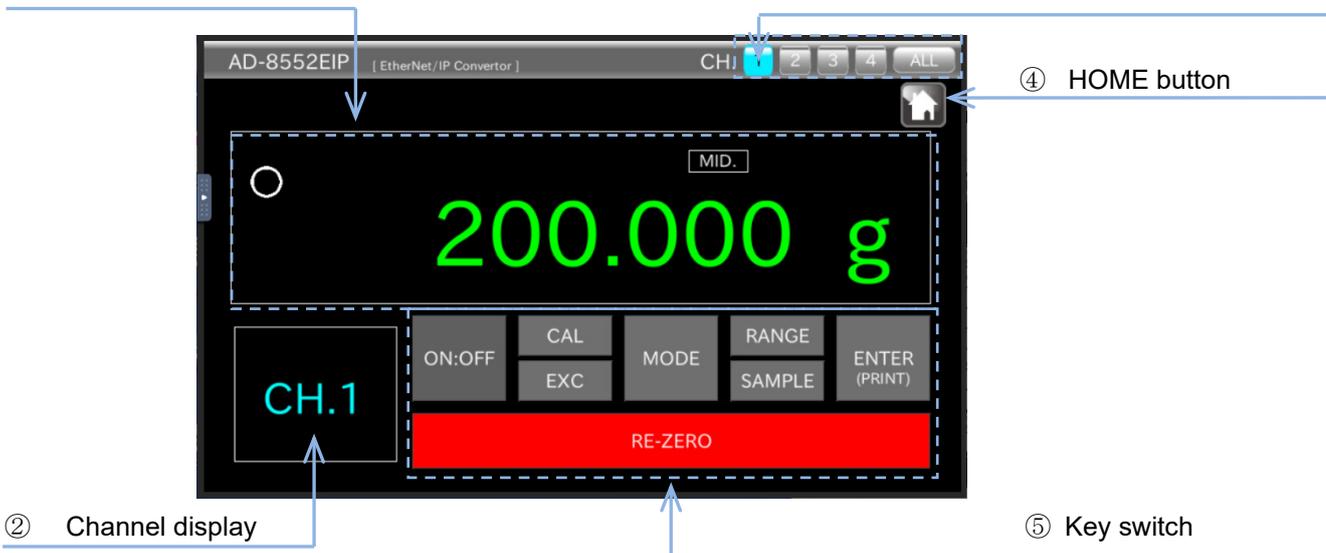

No.	Name	Description
①	Weighing display	Displays the "weighing value" of the weighing device connected to the channel display.
②	Channel display	Displays channels
③	Weighing device display switching button	"10-3. Weighing device operation screen" connected to each channel is displayed.
④	HOME button	"10-2. HOME display" is displayed.
⑤	Key switch	Operates the weighing device ^{※1}

- ※1. The key switches that can be operated differ depending on the measuring instrument to be connected. The contents are in table of "3-2. Applicable models" and each measuring instrument. Please refer to the instruction manual.


■ 4 channel display (ALL) ※2



- ※2. "4 channel display (ALL)" only displays the weighing values of 4 weighing devices. (When operating the weighing device from the WEB interface, use the channel to which the weighing device to be operated is connected. Please go from "1 channel display".)

10-4 Network Setting Screen


- On the network setting screen, you can set the IP address, subnet mask, and default gateway.
Set SW-1: 0 and SW-2: 0, and then turn the power off and then on again to reflect the changes in the settings.

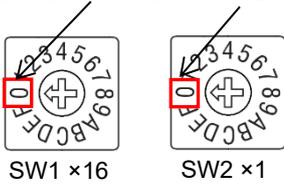

Note

- Please consult with your network administrator before connecting to the network.
- Set the IP address so that it does not overlap with other devices.

■ Network setting screen

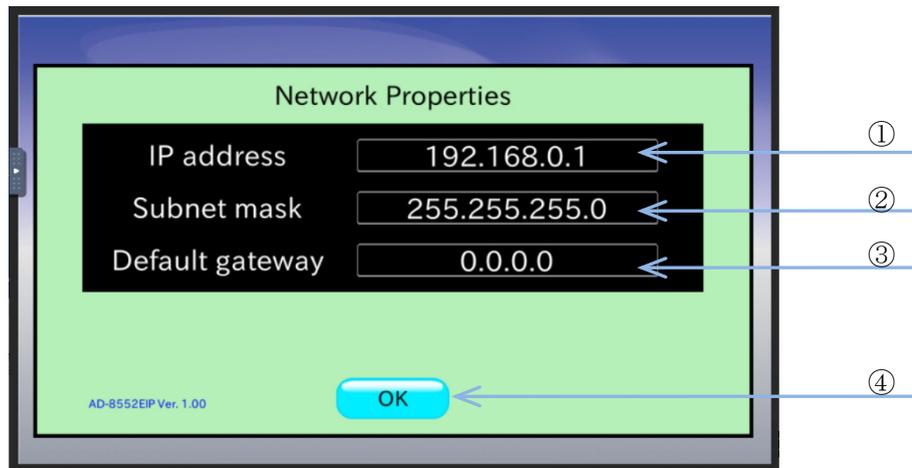

	Name	Setting value (setting range)	Description
①	IP address	0.0.0.0 to 255.255.255.255 Please consult your network administrator for the setting values.	Displays the IP address of this device.
②	Sub-net mask		Displays the subnet mask of this unit.
③	Default gateway		Displays the default gateway of this device.
④	OK button	—	The display returns to "10-2. HOME display".

11. Troubleshooting

Phenomenon	Confirmation and countermeasures
POWER LED does not illuminate	Make sure that power is properly supplied to the power supply terminal of the AD-8552EIP. <ul style="list-style-type: none"> • Is the voltage correct? (DC 24V) • Is the cable connected correctly?
NS LED does not turn green	The connection with the scanner (PLC) has not been established. <ul style="list-style-type: none"> • Is the IP address set so that it does not overlap? • Is the signal output from the scanner?
NS LED is flashing	The connection with the scanner (PLC) has timed out. <ul style="list-style-type: none"> • Is the EtherNet/IP communication cable broken? • Is the scanner turned on?
IP address cannot be changed	Turn the power of the AD-8552EIP off and then on again. When the power is turned on, the changes made to the switch and WEB interface are read and reflected in the operation.
Non-weighing status flag is "1".	Check the setting of the weighing device. <ul style="list-style-type: none"> • Check the RS-232C communication settings of the corresponding channel. • Is the output format of the weighing device set to the A&D standard format?
AD-8552EIP settings cannot be changed.	Turn the AD-8552EIP off and then on again. When the power is turned on, the switch status is read and reflected in the operation.



A&D Company, Limited

3-23-14 Higashi-Ikebukuro, Toshima-ku, Tokyo 170-0013, JAPAN
Telephone: [81] (3) 5391-6132 Fax: [81] (3) 5391-1566

A&D ENGINEERING, INC.

47747 Warm Springs Blvd, Fremont, California 94539, U.S.A.
Tel: [1] (800) 726-3364 Weighing Support:[1] (888) 726-5931 Inspection Support:[1] (855) 332-8815

A&D INSTRUMENTS LIMITED

Unit 24/26 Blacklands Way, Abingdon Business Park, Abingdon, Oxfordshire OX14 1DY United Kingdom
Telephone: [44] (1235) 550420 Fax: [44] (1235) 550485

A&D AUSTRALASIA PTY LTD

32 Dew Street, Thebarton, South Australia 5031, AUSTRALIA
Telephone: [61] (8) 8301-8100 Fax: [61] (8) 8352-7409

A&D KOREA Limited

한국에이.엔.디(주)
서울특별시 영등포구 국제금융로6길33 (여의도동) 맨하탄빌딩 817 우편 번호 07331
(817, Manhattan Bldg., 33. Gukjegeumyung-ro 6-gil, Yeongdeungpo-gu, Seoul, 07331 Korea)
전화: [82] (2) 780-4101 팩스: [82] (2) 782-4264

OOO A&D RUS

ООО "Эй энд Ди Рус"
Почтовый адрес:121357, Российская Федерация, г.Москва, ул. Верейская, дом 17
Юридический адрес: 117545, Российская Федерация, г. Москва, ул. Дорожная, д.3, корп.6, комн. 86
(121357, Russian Federation, Moscow, Vereyskaya Street 17)
тел.: [7] (495) 937-33-44 факс: [7] (495) 937-55-66

A&D Instruments India Private Limited

D-48, उद्योग विहार , फेस -5, गुडगांव - 122016, हरियाणा , भारत
(D-48, Udyog Vihar, Phase-V, Gurgaon - 122016, Haryana, India)
फोन : [91] (124) 4715555 फैक्स : [91] (124) 4715599

ऐ&डी इन्स्ट्रुमेंट्स इण्डिया प्रा० लिमिटेड

A&D SCIENTECH TAIWAN LIMITED. A&D台灣分公司 艾安得股份有限公司

台灣台北市中正區青島東路5號4樓
(4F No.5 Ching Tao East Road, Taipei Taiwan R.O.C.)
Tel : [886](02) 2322-4722 Fax : [886](02) 2392-1794

A&D INSTRUMENTS (THAILAND) LIMITED

บริษัท เอ แอนด์ ดี อินสตรูमेंท์ (ไทยแลนด์) จำกัด
168/16 หมู่ที่ 1 ตำบลรังสิต อำเภอธัญบุรี จังหวัดปทุมธานี 12110 ประเทศไทย
(168/16 Moo 1, Rangsit, Thanyaburi, Pathumthani 12110 Thailand)
Tel : [66] 20038911