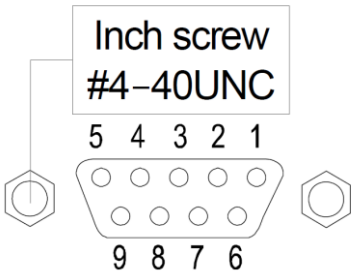
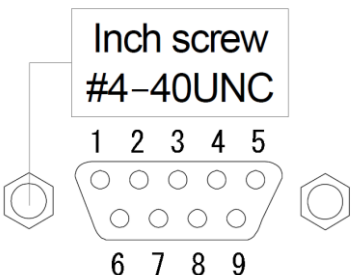


## INSTRUCTION MANUAL ERRATA

### 16.3. HVW-03C, RS-232C Interface

Page 62

Incorrect	Correct
 <p>Inch screw #4-40UNC</p> <p>5 4 3 2 1</p> <p>9 8 7 6</p>	 <p>Inch screw #4-40UNC</p> <p>1 2 3 4 5</p> <p>6 7 8 9</p>