



Points of difference between AD4401-05 and AD4401-06

OP-05 external dimensions (unit: mm)

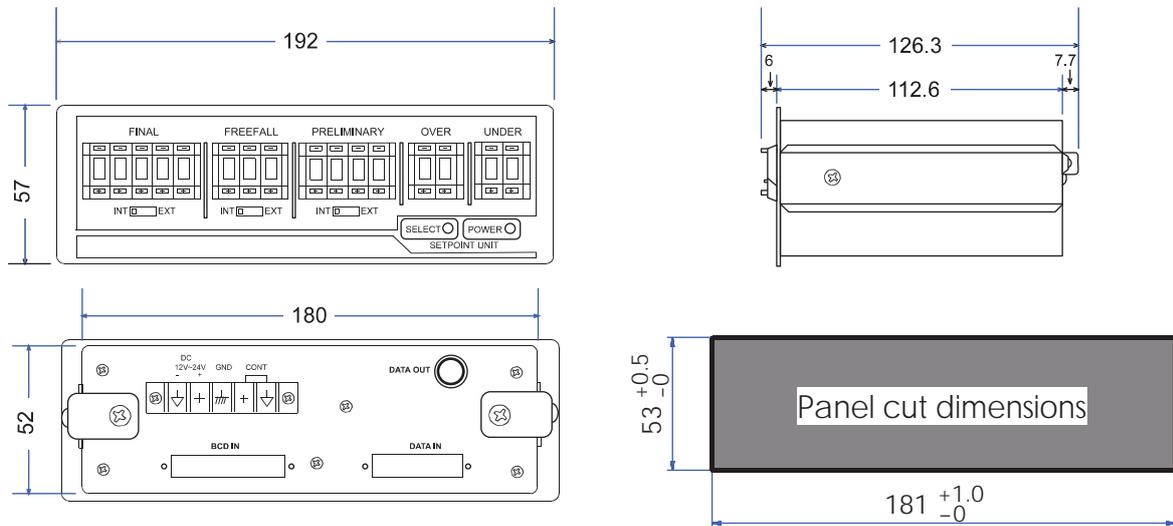

OP-06 external dimensions (unit: mm)

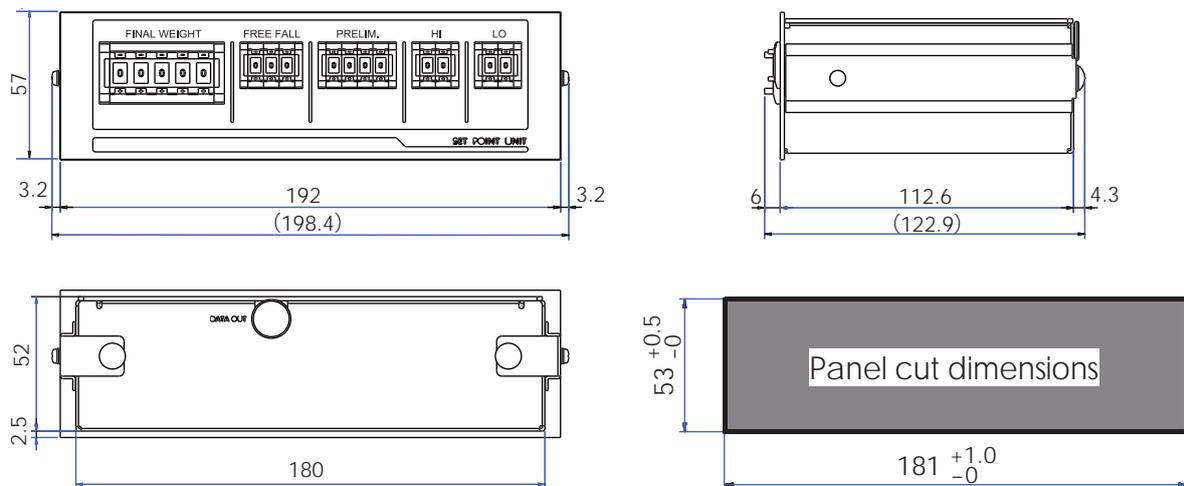

1. The dimensions of OP-05 and OP-06 are almost identical, while the panel cut dimensions are exactly the same. It is possible to easily shuffle between OP-05 and OP-06 installed on the instrumentation board.
2. Setting values can be set externally for OP-05 in BCD, but not for OP-06.
3. For the AD4401, several OP-05 units can be serially connected, however only one unit of the OP-06 can be connected.
4. When OP-05 is receiving BCD input from an external source and several units are connected, an external power supply is required, but this is not the case for OP-06 or when only one OP-05 unit is connected.