
Mini Clamp Meter





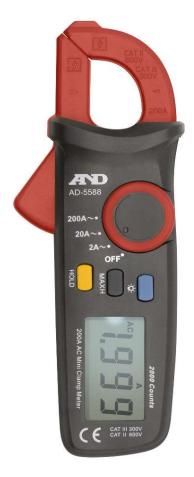

Measurement range can be changed by Function switch

Turning the Function switch turns the device off or changes the measurement range. Resolution and accuracy can be changed by switching the measurement range.



Range	Resolution	Accuracy
2.000A	1mA	±(4%rdg+30dgts)
20.00A	10mA	±(3%rdg +20dgts)
200.0A	100mA	±(2.5%rdg +20dgts)

AD-5588

Hold function, Peak Hold function

Pressing the HOLD switch during measurement pauses the display at the value shown at that point. Pressing the MAXH switch during measurement displays the maximum measured value. Maximum value is automatically updated.

Sleep Mode

After about 15 minutes of inactivity, the display will turn off and enter Sleep Mode to prevent the battery from running out of power.



QR Code for Product Webpage



Specification	AD-5588	
Display	1999 count LCD display	
Overload indicator	OL	
Sampling	Approx. 3 times / sec.	
Clip inner diameter	Арргох. Ф16 mm	
Maximum input current	200Arms	
Operating temp. RH	0° C to 30° C 75%RH or less (no condensation) 30° C to 40° C 40%RH or less (no condensation) 2000 m or less above sea level	
Storage temp. RH	-10° C to 50° C 75%RH or less(no condensation)	
Power supply	Two AAA batteries	
Buttery life	Approx. 350 hours standby time	
Size	158(W) × 60(H) × 33.5(D) mm	
Weight	t Approx.170 g (including batteries)	
Accessories	Instruction Manual, batteries (for testing)	

Backlight backlit display for viewing in the dark



350 hours battery life

2 x AAA batteries allows the device to operated for up to 350 hours. (continuous standby time)



Discover Precision

A&D Company, Ltd. (JAPAN) URL: aandd.jp A&D Engineering, Inc. (USA) URL: andonline.com A&D Australasia Pty Ltd. (Australia) URL: andaustralasia.com.au A&D Korea Ltd. (South Korea) URL: andk.co.kr

A&D Instruments Ltd. (United Kingdom) URL: andprecision.com <German Sales Office> URL: andprecision.com A&D Rus Co., Ltd. (Russia) URL: and-rus.ru A&D Instruments India (P) Ltd. (India) URL: aanddindia.in A&D Scientech Taiwan Ltd. (Taiwan)

A&D Scientech Taiwan Ltd. (Taiwan) URL: aandd.com.tw

A&D Instruments Thailand Ltd. (Thailand) URL: thai.andprecision.com